


Datasheet

Subject to technical alteration
Issue date: 28.06.2017

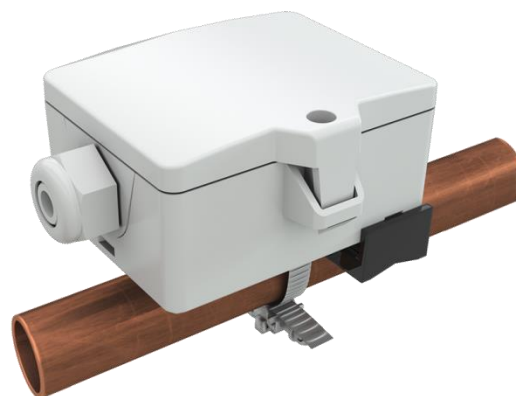

Application

Duct/Immersion sensor for measurement of air temperature and other gaseous mediums for HVAC applications (e.g. supply and exhaust ducts) with pocket $\varnothing=6$ mm. Can be used as an immersion temperature sensor combined with a thermowell pocket.

Types Available

Contact sensors temperature – active RS485 Modbus

VFG54+ RS485 Modbus

Security Advice – Caution



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

Notes on Disposal



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

Build-up of Self-Heating by Electrical Dissipative Power

Temperature sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage ($\pm 0,2$ V) this is normally done by adding or reducing a constant offset value. As Thermokon transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0..10 V / 4..20 mA have a standard setting at an operating voltage of 24 V =. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of a trimming potentiometer on the sensor board.


Remark: Occurring draft leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

Technical Data

| | |
|-----------------------|--|
| Measuring values | temperature |
| Output voltage | 0..10 V or 0..5 V, min load 10k Ω (live-zero configuration via Thermokon USEapp) |
| Network technology | RS485 Modbus |
| Power supply | 15..35 V = or 19..29 V ~ |
| Power consumption | max. 2,5 W (24 V =) max. 4,3 VA (24 V ~) |
| Measuring range temp. | -20..+80 °C (default setting), optionally configured via Thermokon USEapp |
| Accuracy temperature | $\pm 0,5$ K (typ. at 21 °C) |
| Display | LCD 29x35 mm with RGB backlight |
| Enclosure | enclosure USE-M, PC, pure white, with removable cable entry |
| Protection | IP65 according to EN 60529 |
| Cable entry | M25 for cable max. $\varnothing=7$ mm, seal insert for fourfold cable entry |
| Connection electrical | removable plug-in terminal, max. 2,5 mm ² removable plug-in terminal, max. 1,5 mm ² |
| Pocket | Modbus clamp brass, spring loaded sensor |
| Ambient condition | enclosure -20..+70 °C, max. 85% rH short term condensation |
| Mounting | installation possible in or across the direction of the pipe |

Mounting Advices


The device is fixed using the tightening strap. Use contact fluid for better heat transfer between sensor and measuring medium. To avoid permeation of condensate, mount the sensor on top of the tube, if possible. The installation is possible in or across the direction of the pipe.

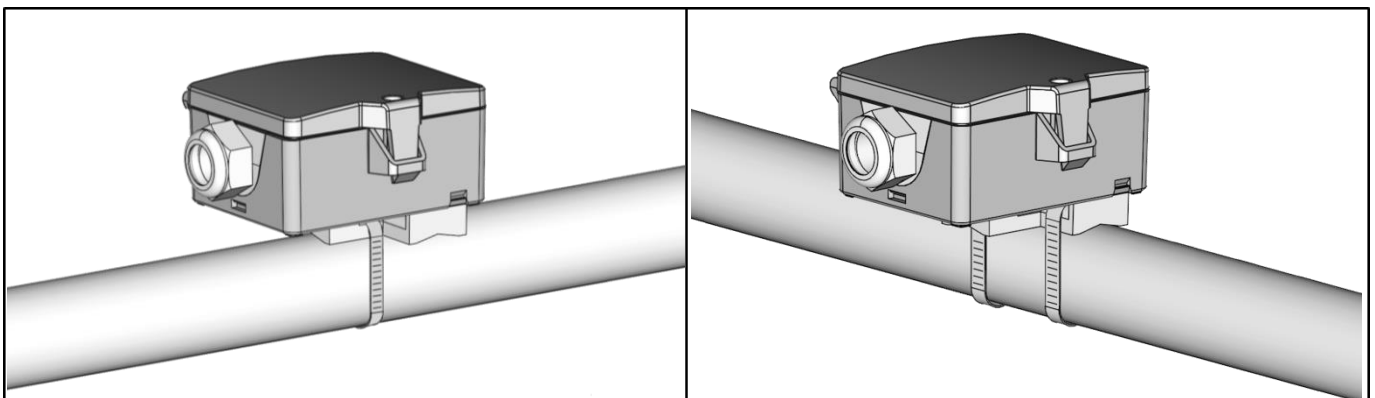

Connection Plan

To change the output voltage range (default 0..10 V to 0..5 V) via jumper, the display must be removed from the board first. If the RS485 cable is looped through, connect both cable shields using the enclosed 2-pol. Connect terminal as shown.

VFG54+ RS485 Modbus

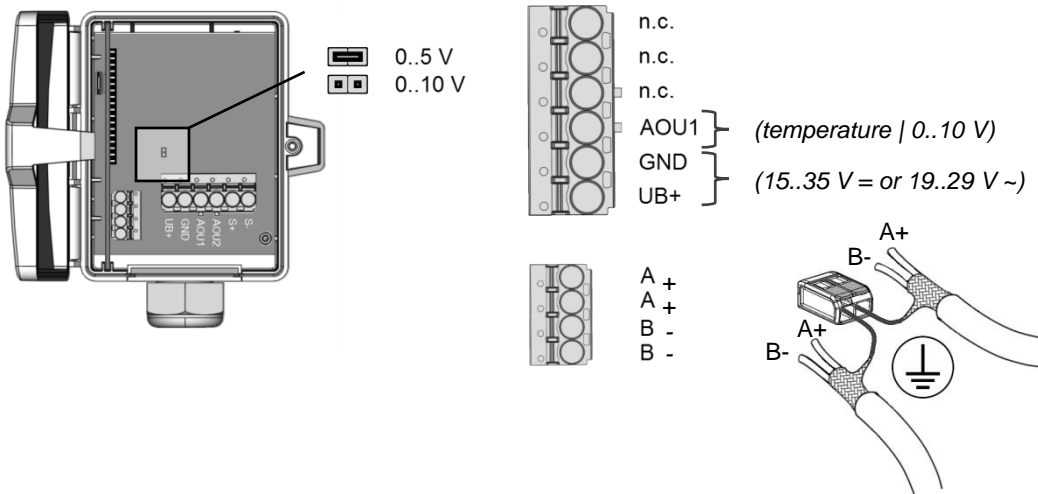

The modbus address of the device is set in the range of 1 ... 31 (binary encoded) using a 5-pole DIP switch. With address 0 via DIP, an extended address range (32..247) is available via USEapp.




Modbus addresses:

USE-RS485 Modbus Interface

A detailed description of the Modbus addresses can be found under the following link:

→ [Download](#)

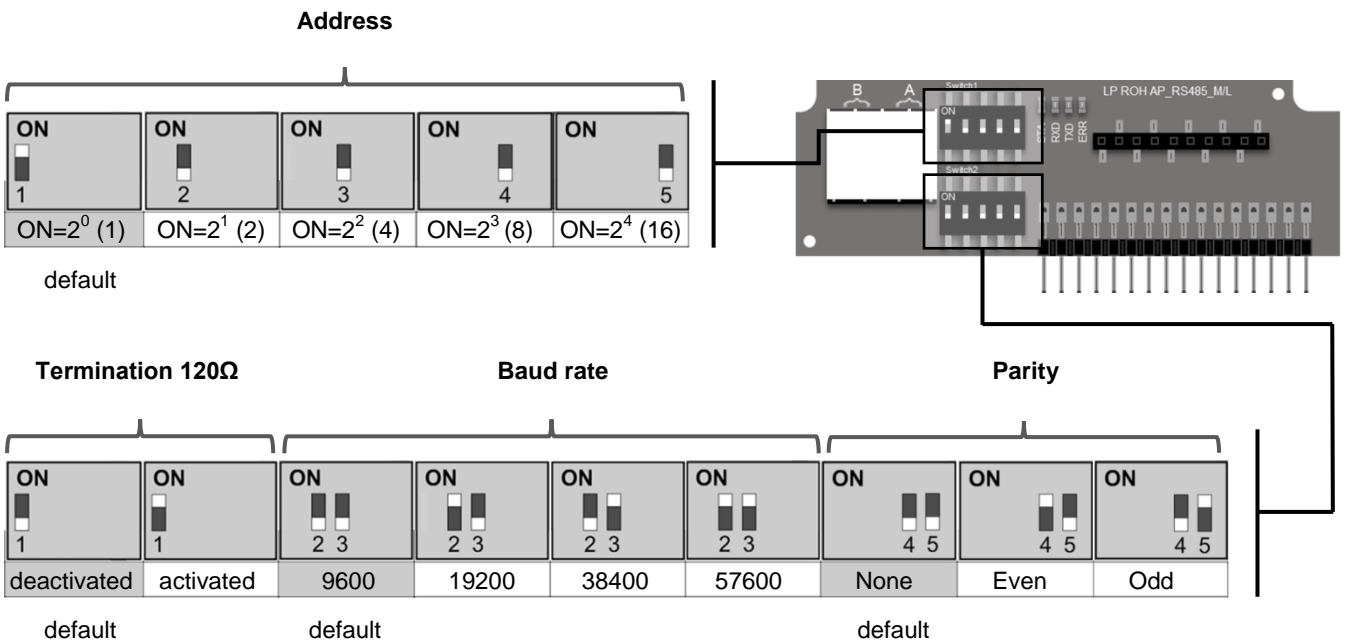

Configuration



The Thermokon bluetooth dongle with micro-USB is required for communication between USEapp and USE-M / USE L (Item No...: 668262). Commercial bluetooth dongles are not compatible.


Application-specific reconfiguration of the devices can be carried out using the Thermokon USEapp. The configuration is carried out in the voltage-supplied state.



The configuration-app and the app description can be found in the download area of our webpage.

→ [Download \(APK-file for Android\)](#)

Dimensions (mm)

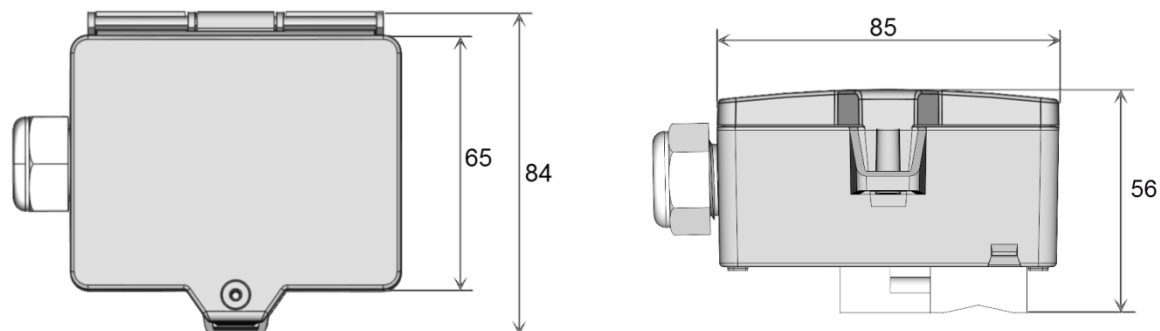

Accessories (included in delivery)

Mounting kit 4

• Cable entry M25 • Wago twofold terminal • Cover screw • 2 Screws (countersunk head)

Item No. 674140

Accessories (optional)

Bluetooth dongle

Tension clamp for pipes \varnothing up to 110 mm with contact fluid

Tension clamp for pipes \varnothing up to 250 mm with contact fluid

Tightening strap PA for pipes \varnothing up to 100 mm with contact fluid

Cable entry M25 USE white, sealing insert 4x $\varnothing=7$ mm (4 pcs)

Item No. 668262

Item No. 658911

Item No. 648103

Item No. 668071

Item No. 641364