Outdoor sensor for relative humidity and temperature



Datasheet

Subject to technical alteration Issue date: 26.06.2017



Application

Sensor for measuring humidity and temperature in outdoor areas. In delivery condition, the sensor is designed for measuring temperature and relative humidity. Alternatively the output can be set to absolute humidity, enthalpy or dew point. A mounting base for mounting on a level surface and fixing material are included in delivery.

Types Available

Outdoor humidity sensor temperature + humidity - active 2x 0..10 V | 4..20 mA

FTA54+ VV FTA54+ AA

Options: Additional passive temperature sensor (type VVS|AAS)

eg: PT100/PT1000/NI1000/NI1000TK5000/NTC10K... and other sensors on request.

Security Advice - Caution



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

Page 2 / 4 Issue Date: 26.06.2017

Notes on Disposal



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

Build-up of Self-Heating by Electrical Dissipative Power

Temperature sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage (± 0.2 V) this is normally done by adding or reducing a constant offset value. As Thermokon transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0..10 V / 4..20 mA have a standard setting at an operating voltage of 24 V =. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of a trimming potentiometer on the sensor board.

Remark: Occurring draft leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

Application Notice for Humidity Sensors

Refrain from touching the sensitive humidity sensor/element. Touching the sensitive surface will void warranty.

For standard environmental conditions re-calibration is recommended once a year to maintain the specified accuracy.

When exposed to high ambient temperature and/or high levels of humidity or presence of aggressive gases (i.e. chlorine, ozone, ammonia) the sensor element may be affected and re-calibration may be required sooner than specified. Re-calibration and deterioration of the humidity sensor due to environmental conditions are not subject of the general warranty.

Technical Data

Measuring values		temperature, humidity (humidity output configurable)		
		2x 010 V 2x 010 V (min. load 10 kΩ) + passive sensor		
Output Amp	AA AAS			
Power supply VV VVS AA AAS		1524 V = (±10%) or 24 V ~ (±10%)		
		1524 V = (±10%)		
Power consumption VV VVS AA AAS		max. 0,4 W (24 V =) 0,8 VA (24 V ~)		
		max. 1 W (24 V =)		
Measuring range temp passive active		-20+70 °C		
		adjustable at the transducer: -20+80 0+50 -40+60 -15+35 °C		
		default setting: -20+80 °C		
Measuring range humidity		0100% rH non-condensing		
Measuring range absolute humidity		adjustable at the transducer: 050 080 g/m³		
		default setting: 050 g/m³		
Measuring range enthalpy		085 kJ/kg		
Measuring range dew point		adjustable at the transducer: 050 -20+80 °C		
		default setting: 050 °C		
Accuracy temperature		typ. 0,3 K (typ. at 21 C°)		
Accuracy humidity		±2% between 1090% rH (typ. at 21 °C)		
Enclosure		enclosure USE-M, PC, pure white		
Protection		IP65 according to EN 60529		
Cable entry		M16 for cable max. Ø=8 mm		
Connection electrical		removable plug-in terminal, max. 2,5 mm ²		
Filter		stainless steel wire mesh		
Ambient condition		-20+70 °C, short term condensation		
Notes		additional passive sensor available (type VVS AAS)		


Application Notice

After a certain time, dirt in the air can collect on the filter and then adversely affect the operation of the sensor. Under normal ambient condition an annual maintenance is recommended. Rinse the filter after cleaning with distilled water and dry it using clean oil-free air or nitrogen. Extremely contaminated filters should be replaced. At extreme ambient conditions, e.g. corrosive gases, the humidity sensor may have to be changed.


Issue Date: 26.06.2017 Page 3 / 4

Mounting Advices

In case of outdoor installation avoid direct rain and sun contact. Probably use sun respectively rain protection. Cable entry from bottom or side. For side cable routing set loop so that precipitation can drain defined. Observe permissible ambient condition.

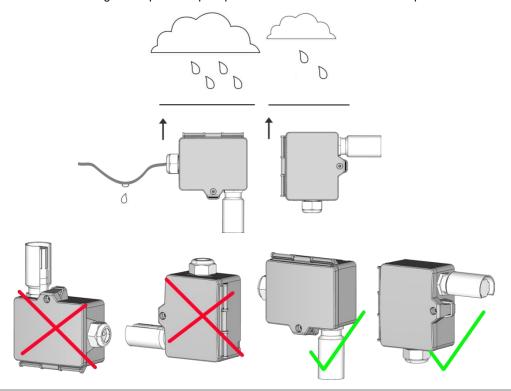

Connection Plan

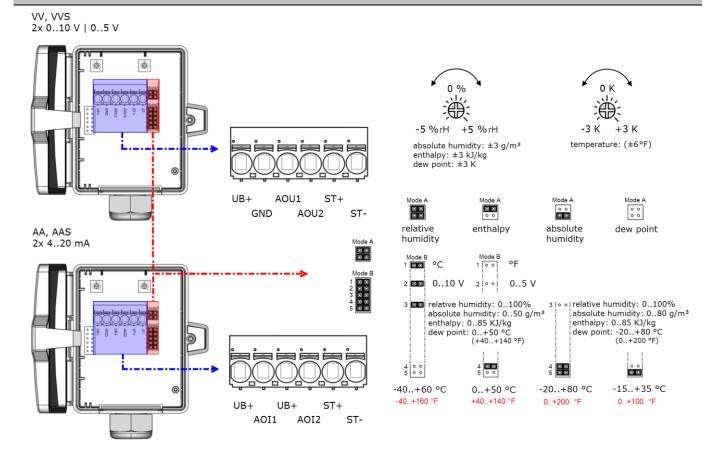

AOI1 | AOU1: humidity AOI2 | AOU2: temperature

fig. (Measuring range and offset adjustment, default settings: -20 °C..+80 °C | 0 K)

Page 4 / 4 Issue Date: 26.06.2017


Clamp ST+ | ST-: passive Sensor (VVS | AAS)

The adjustment of the measuring ranges is made by changing the jumpers in a de-energized state. The output value of the new measuring range is available after 2 seconds.

Note (type FTA54+ AA)

When only using the temperature output, the humidity output must always be connected to mass/GND of the analog input module.

Dimensions (mm)

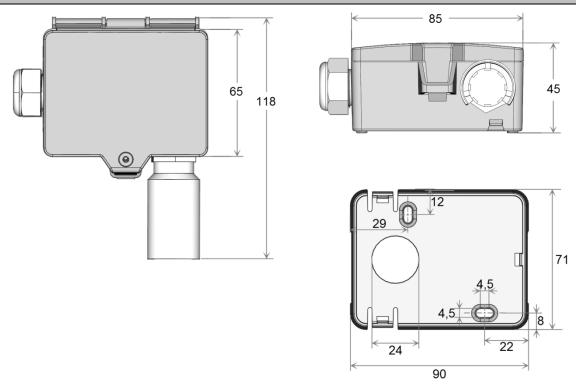

Accessories (included in delivery)

Rain protection
Mounting base
Mounting kit 5
• Cable entry M16 • Cover screw • 2 Rawlplugs • 2 Screws (countersunk head)

Item No. 670715 Item No. 631228 Item No. 640558

Accessories (optional)

Cable entry M25 USE white, sealing insert $4x \varnothing = 7 \text{ mm}$ (4 pcs) Filter stainless steel, wire mesh

Item No. 641364 Item No. 231169

M16 Sealing inserts cable entry (packaging unit 10 pcs.)

Ø	3 mm	5 mm	7 mm	8 mm
Item No	641036	641012	639248	641340