



TI3230en

Technical Instruction**thermokon**[®]
asia pacific**PDI1- Series (V&T)****Air Velocity and Temperature Sensor
with Active Output**

The PDI1-Series (V&T) is designed to measure air velocity and temperature in HVAC systems

Field selected measuring ranges and sensor outputs

Field select Multiple Velocity measuring ranges

Optional with LCD and relay output available

Optional LCD display available.

The sensor works with low power supply

The control outputs are active.

**USE**

Compatible to all common HVAC DDC and Analog Controls systems, with/without Building Automation System

Differential pressure measurement in HVAC systems

Monitoring the air dampers in the primary or secondary controls systems

Supervision of the status of heating / cooling coils, preventing overheating / freezing

Features

Sensor with active outputs

Internal selectable measuring ranges and sensor outputs

Optional with LCD- backlit display

Optional with field adjustable relay output

Professional and practical product design, withstands rough environmental conditions

Easy to use, install and maintain

Product Range


Order Codes	Power Supply	Sensor Outputs	Measuring Ranges	Display	Relay Output	Protection
PDI1.AA	AC/DC 24V ±10%	0...10V* or 4...20mA	0...50°C 0...2m/s 0...10m/s* 0...20m/s	n/a	n/a	IP54
PDI1.BA				LCD	n/a	
PDI1.CA				LCD	Relay (STDP)	

* default Value


Sensor Specification	Sensor Specification	Measured	Temperature / Air Flow	
		Sensor Characteristics	Active / Active	
		Sensor Output (s)	0..10V (min 1k Ω) or 4...20mA (min. 0.4kΩ)	
		Accuracy (T)	<0.2m/s +5% of actual value	
		Accuracy (v= 0...2m/s)	<0.5m/s +5% of actual value	
		Measuring Range (v)	0...10m/s / 0..50°C	
		Optional Measuring Range (v)	0...2m/s; 0...20m/s	
		Temperature Sensor	0...50°C	
Technical Information	Electrical Information	Power Supply	AC/DC 24V (±10%)	
		Frequency	50 / 60 Hz at AC 24V	
		Terminal Clamp	Screw terminal, max. 1.5mm ²	
		Power Consumption	max. 125mA	
		Relay Rating	AC 250V, max 6A; DC 30V, max. 6A	
	Mechanical Information	Immersion Rod Diameter	Ø10mm	
		Immersion Rod Length	195mm	
		Cable Entry	Dual entry, 2 x M16, Ø6...Ø8mm cables	
		Sensing Element Position	external, top of the immersion rod	
		Range Selection	Jumper switches inside the housing	
	User Interface	Display	LCD- backlit (45.7x12.7mm)	
	Color and Materials	Housing Cover	PC, grey	
		Housing Bottom	ABS, grey	
		Lock	Snap Connector	
		Cable Glanc	Grey ABS	
		Gland Rubber S	Black Rubber	
		User element	Removable Jumpers	
		Immersion Rod	US: AISI 304; EU: EN X 6 CrNi 18 10; GER: W.N. 1.301	
		Environmental Conditions	Operation Temperature	0°C...+50°C
			Operation Humidity	<95% r.h., no condensation
			Transport Temperature	-35°C...+70°C
	Transport Humidity		< 95% r.h.	
	Storage Temperature		-10°C...+70°C	
	Storage Humidity		< 85% r.h., no condensation	
	Norms and Directives	IP- Rating	IP54 to IEC6052	
		Safety Class	III to EN 60 730	
		Product Standard 1	Automatic Electric. Controls for household and similar use	
		Product Standard 2	2009/EN 60 730-1	
		CE Conformities to	2004/108/EG Electromagnetic Compatibility EMV	
		LVD Directive	2014/35/EU	
		RoHS Compatibility	RoHS 3, Directive 2015/863	
		WEEE Directive	2012/19/EU	
Operation Climatic Condition		IEC 60 721-3-3		
Operation Mechanical Condition		IEC 60 721-3-2 to class2M2		
Transport to Climatic Condition		IEC 60 721-3-2		
Transport Mechanical Condition		IEC 60 721-3-2 to class2M2		
Storage Climatic Condition		IEC 60 721-3-1		
Storage Mechanical Condition		IEC 60 721-3-1 to class2M2		
Miscellaneous		Accessories	Mounting Kit, Included in delivery	Duct Mounting flange
	Shipping & Handling	Minimum Order	1 box with 1 piece	
		Package Material	Rigid Cardboards Packaging	
	Order Notes	Order Code	See Product Range, Page 1, e.g. PDI1.AA	

All Information and technical data are subject to alteration

SCHEMATICS

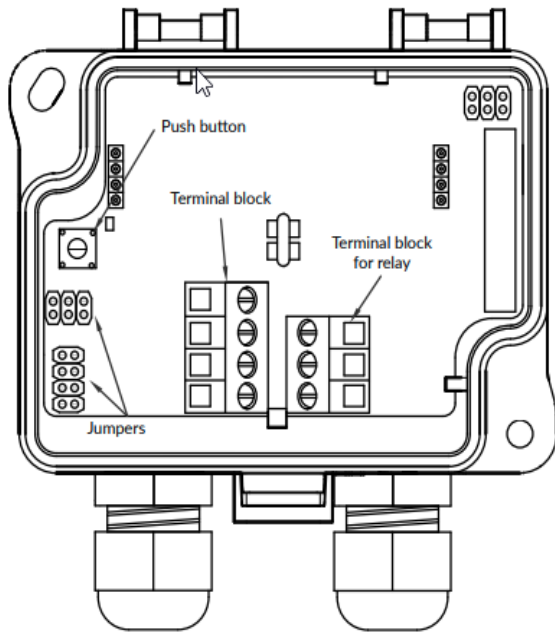

DIMENSIONAL DRAWINGS

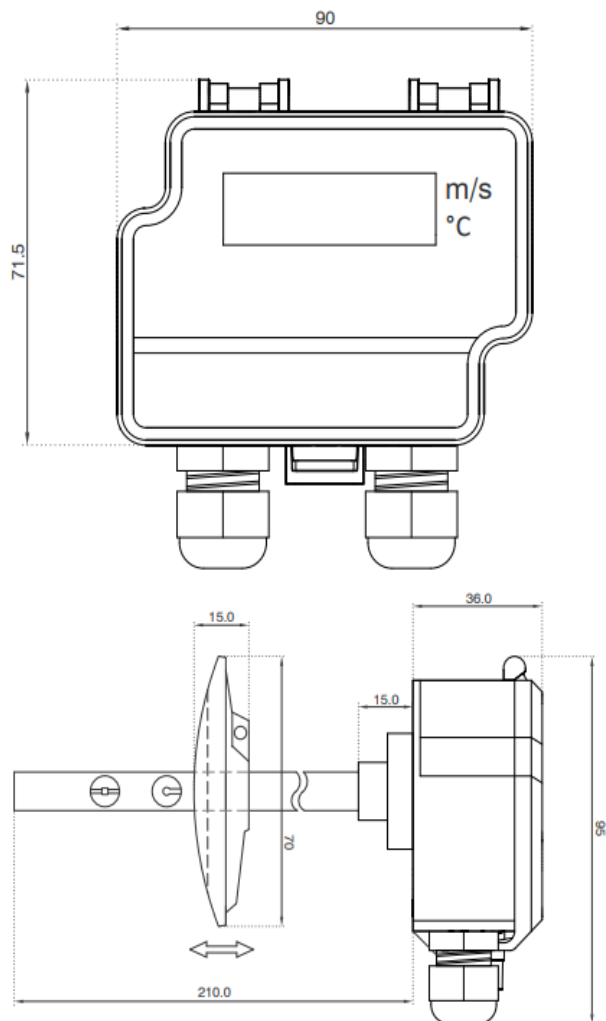

INSTALLATION

- 1) Mount the device in the desired location (see step 1).
- 2) Open the lid and route the cable through the strain relief and connect the wires to the terminal block (see step 2). Use a separate strain relief for each cable.
- 3) The device is now ready for configuration.

⚠ WARNING! Apply power only after the device is properly wired.

STEP 1: MOUNTING THE DEVICE

- 1) Select the mounting location (on a duct).
- 2) Use the mounting flange of the device as a template and mark the screw holes.
- 3) Mount the flange on the duct with screws (not included). (Figure 1a)
- 4) Adjust the probe to the desired depth. Ensure that the end of the probe reaches the middle of the duct. (Figure 1b)
- 5) Tighten the screw on the flange to hold the probe in position.

Figure 1a - Mounting a flange

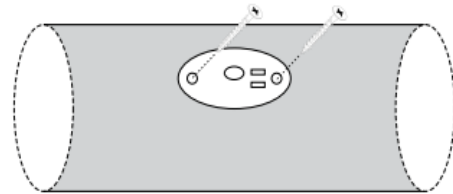


Figure 1b - Mounting the probe in a flange


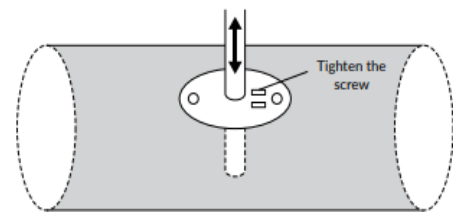




Figure 1c - Mounting orientation

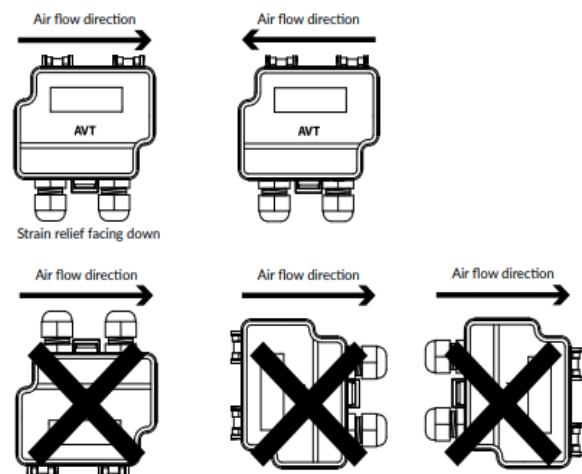

STEP 2: WIRING DIAGRAMS

For CE compliance a properly grounded shielding cable is required.

- 1) Unscrew the strain relief and route the cable(s). Use the strain relief on the left for power in and signal out (Tout/vout) and the strain relief on the right for relay.
- 2) Connect the wires as shown in figure 2a and 2b.
- 3) Tighten the strain relief.

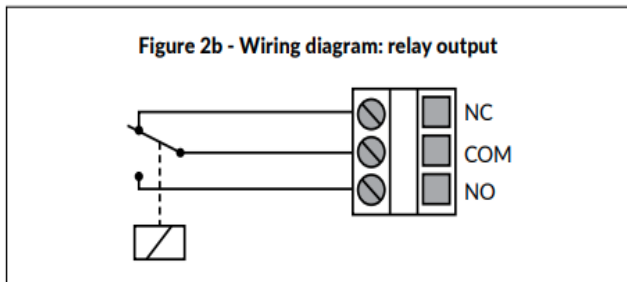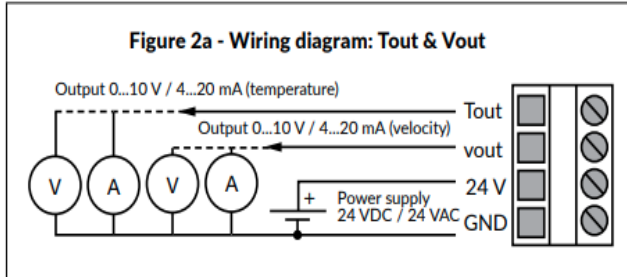


CONFIGURATION

- 1) Select the desired measurement range (see step 3).
- 2) Select the desired measurement mode (see step 4).
- 3) Configure the relay (optional) (see step 5).


The device is now ready to be used.

STEP 3: SELECTING THE MEASUREMENT RANGE

Select the measurement range by installing jumpers as shown in Figure 3a. (See Figure 3a-3b – Jumper settings)

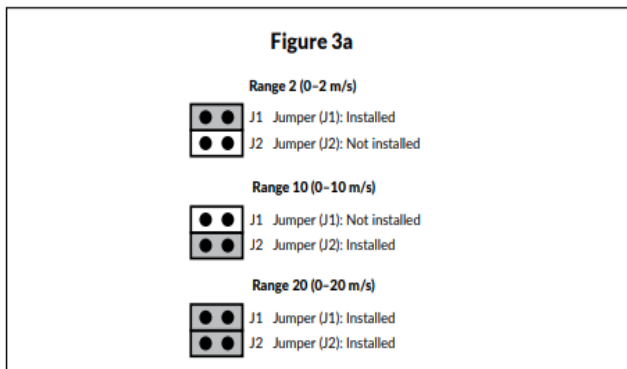

SELECTING THE MEASUREMENT RANGE CONTINUED

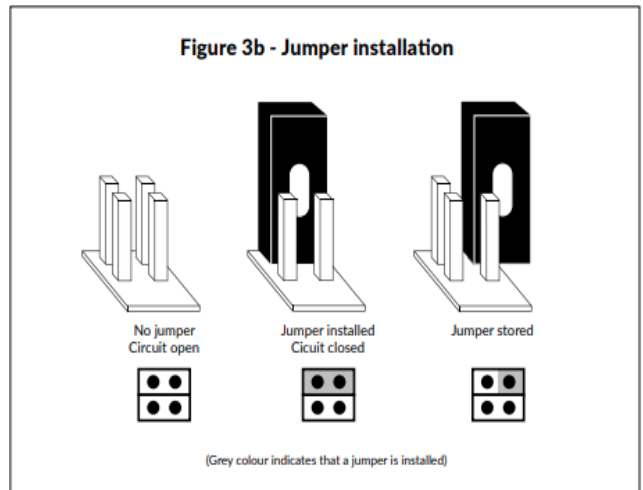


STEP 4: SELECTING THE MEASUREMENT MODE

Configure the outputs:

- Temperature output (Tout)
- Velocity output (vout)


Select the output mode, current (mA) or voltage (V), by installing jumpers as shown in Figure 4. Both outputs, temperature (T) and velocity (v), are configured separately.

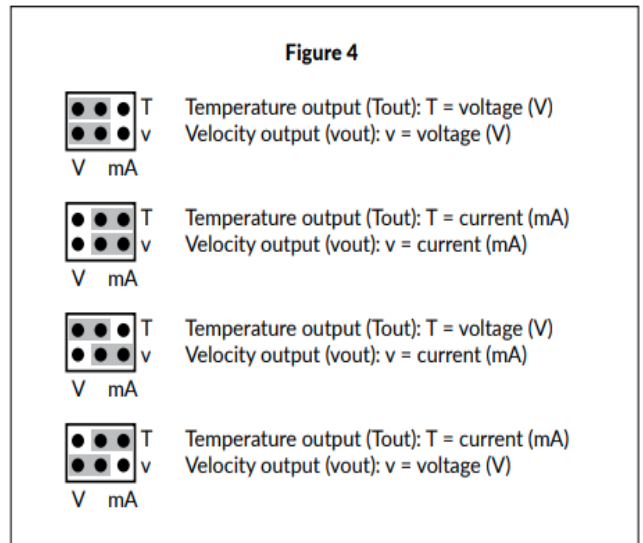

STEP 5: CONFIGURING THE RELAY RELAY MODEL ONLY


- Switching point (display required)
 - Install a jumper to pins labeled sw.p. (switching point). (See Figure 5)
 - Press down on the pushbutton to select the switching point (e.g. 5,05 m/s = NC) of the relay. The chosen value (m/s) is shown on the display.
 - Remove and store the jumper after the configuration is completed.
- Hysteresis (display required)
 - Install a jumper to pins labeled hyst. (hysteresis). (See Figure 5)
 - Press down on the pushbutton to select the hysteresis of the relay switching point. The chosen value (m/s) is shown on the display.
 - Remove and store the jumper after the configuration is completed.

NOTE! Relay configuration jumpers must be removed and stored for proper operation.

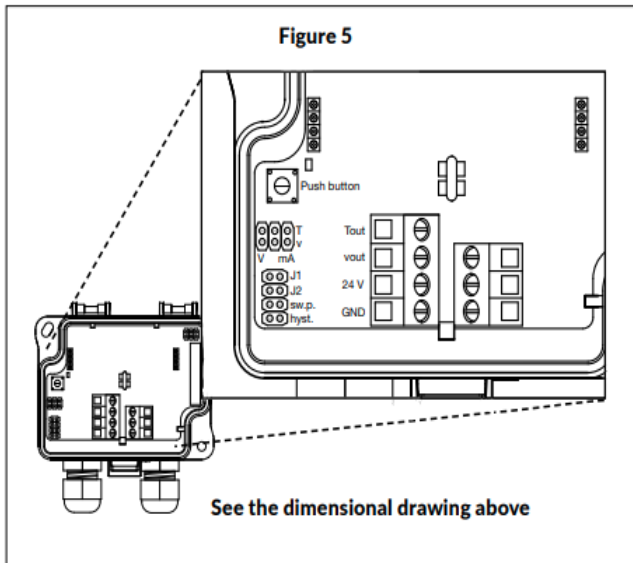

HYSTERESIS

Hysteresis represents a dead-zone less than or equal to 20 % of the range selected. The hysteresis is anchored at the switching point (sw.p.), extending to the hysteresis range selected.

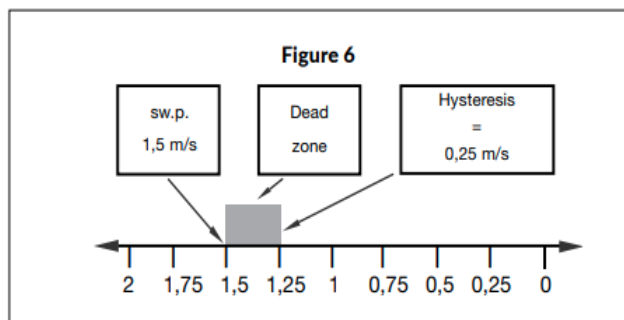

In the above example switching point is set at 1,5 m/s, and hysteresis is set at 0,25 m/s. As the velocity increases over 1,5 m/s, the relay will open/close. As velocity reduces, the relay will not close/open until the velocity passes 1,25 m/s, thus preventing rapid cycling.

HYSTERESIS CONTINUED

Figure 7

Range	Maximum Hysteresis
m/s	m/s
0 – 2	0.4
0 – 10	2
0 – 20	4

The hysteresis maximum setting is based on the range selected.

RECYCLING/DISPOSAL

The parts left over from installation should be recycled according to your local instructions. Decommissioned devices should be taken to a recycling site that specializes in electronic waste.



WARRANTY POLICY

The seller is obligated to provide a warranty of five years for the delivered goods regarding material and manufacturing. The warranty period is considered to start on the delivery date of the product. If a defect in raw materials or a production flaw is found, the seller is obligated, when the product is sent to the seller without delay or before expiration of the warranty, to amend the mistake at his/her discretion either by repairing the defective product or by delivering free of charge to the buyer a new flawless product and sending it to the buyer. Delivery costs for the repair under warranty will be paid by the buyer and the return costs by the seller. The warranty does not comprise damages caused by accident, lightning, flood or other natural phenomenon, normal wear and tear, improper or careless handling, abnormal use, overloading, improper storage, incorrect care or reconstruction, or changes and installation work not done by the seller. The selection of materials for devices prone to corrosion is the buyer's responsibility, unless otherwise is legally agreed upon. Should the manufacturer alter the structure of the device, the seller is not obligated to make comparable changes to devices already purchased. Appealing for warranty requires that the buyer has correctly fulfilled his/her duties arisen from the delivery and stated in the contract. The seller will give a new warranty for goods that have been replaced or repaired within the warranty, however only to the expiration of the original product's warranty time. The warranty includes the repair of a defective part or device, or if needed, a new part or device, but not installation or exchange costs. Under no circumstance is the seller liable for damages compensation for indirect damage.